



Installation instructions

UNIT TireChanger w/BeadBreaker

Thank you for purchasing our UNIT product.
In order to use this product correctly, please read this manual carefully before use.


1.Product Description

- This product is a tire changer for off-road motorcycles.
- Compatible wheel sizes are 16 to 21 inches. Axle diameter of 15mm or more. Tire width up to size 150.
- This product cannot be used for cast wheels.
- The position of the bead break plate can be adjusted in 8 stages in the horizontal direction and 2 stages in the vertical direction. Please change the position according to the diameter and thickness of the tire.

2.Important notes


- Do not process or modify the product. It may cause an accident or damage.
- Bead breaking should be done while pushing down the tire on the opposite side of the bead break plate. If you do not do so, the shaft may get bent.

3.Set contents and part names

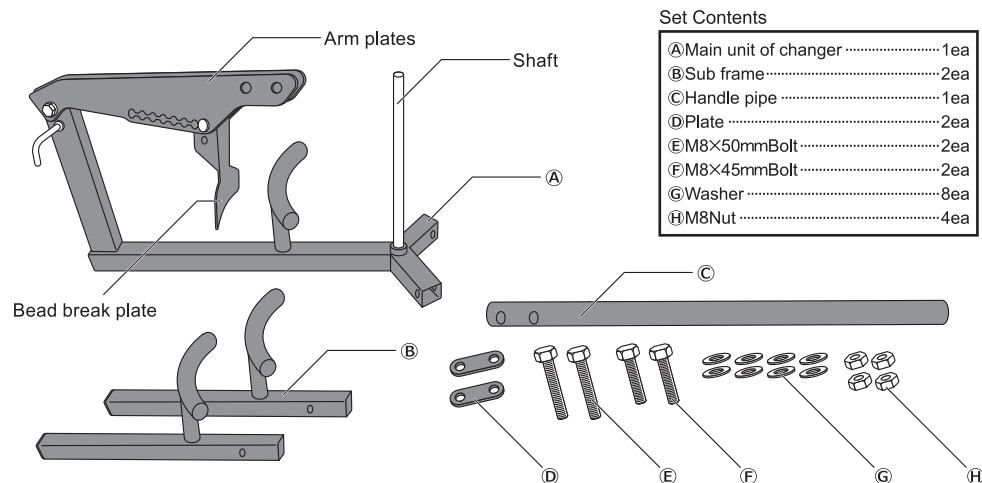


4.How to assemble

- 1) Put the ③ handle pipe and the ④ plates between the arm plates and secure with the ⑤ M8×50mm bolts, ⑦ washers and ⑧ M8 nuts (Fig 1).

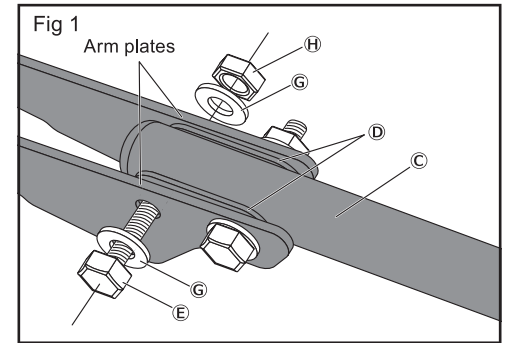

- 2) Insert the ② subframe into the ① main unit of changer, align the through holes, and secure with the ⑥ M8×45mm bolts, ⑦ washers, and ⑧ M8 nuts (Fig 2).

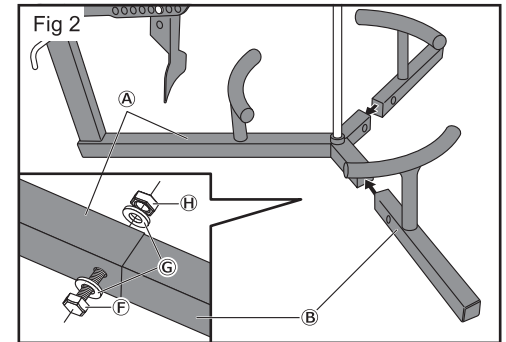

Finished

