



取扱説明書

ZETA ロワリングリンク

この度は、ZETA商品をお買い上げいただきまして、誠にありがとうございます。本製品を正しくお使いいただくために、この説明書をよくお読みになって、取付作業を行って下さい。

注意事項

取付けには専門の知識と技術が必要です。不用意に作業を行うと思わぬ事故や故障の原因となります。

本製品を取り付けると、サスペンションの動作、車体の姿勢が変化します。
必要に応じてフロントフォークの突き出し量やリアサスペンションのイニシャル調整を行ってください。

サイドスタンドを使用する場合は車体の傾きが変わる為、駐車位置にご注意ください。


異常が認められた場合は作業を中断し、弊社までお問合せ下さい。

製品に加工、改造は行わないで下さい。事故や破損の原因となります。

取付方法

- 1) 車両の純正リンクロッドを固定しているナットを緩めます。
- 2) リフトスタンド等でリアホイールが浮くように車体を持ち上げます。
- 3) リアホイールを支えながら純正リンクロッドとボルトを外します。
- 4) ZETA ロワリングリンクを取り付け、規定トルクでナットを締めます。

※締め付けトルク数値は各メーカー発行のサービスマニュアルを参照し作業を行ってください。

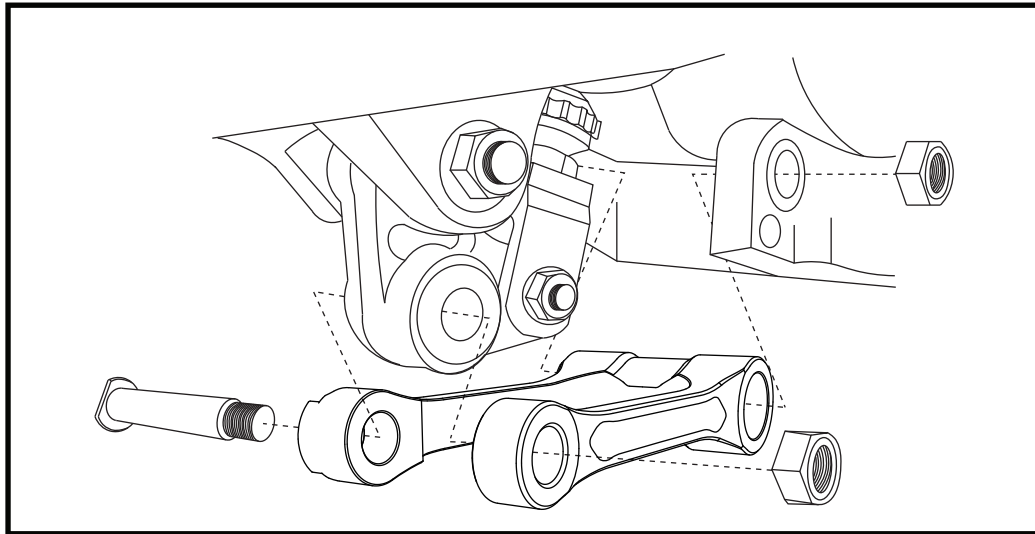

株式会社 ダートフリーク

〒489-0005 愛知県瀬戸市中水野町2-30



ZE56-034B

Installation instructions

ZETA Lowering Link

Thank you for purchasing ZETA products. Please read these instructions carefully prior to installation.

Important Notes

- Installation requires special knowledge and technique.
Haphazard installation may cause accidents or failure.

- Motorcycle suspension movement and body posture will change after installing this kit. Please adjust front fork position and rear suspension preload for proper suspension


- Motorcycle standing angle with side stand will be different.
Please be careful when packing the bike with side stand.

- If you have a problem with this kit, please stop using it and contact us.

- Do not modify this kit, it may cause of accidents or failure.

Installation

- 1) Loosen stock link rod nuts.
- 2) Lift up rear wheel with lift stand.
- 3) Hold rear wheel and remove link rods.
- 4) Install lowering link and tighten nuts with tightening torque shown on your service manual.

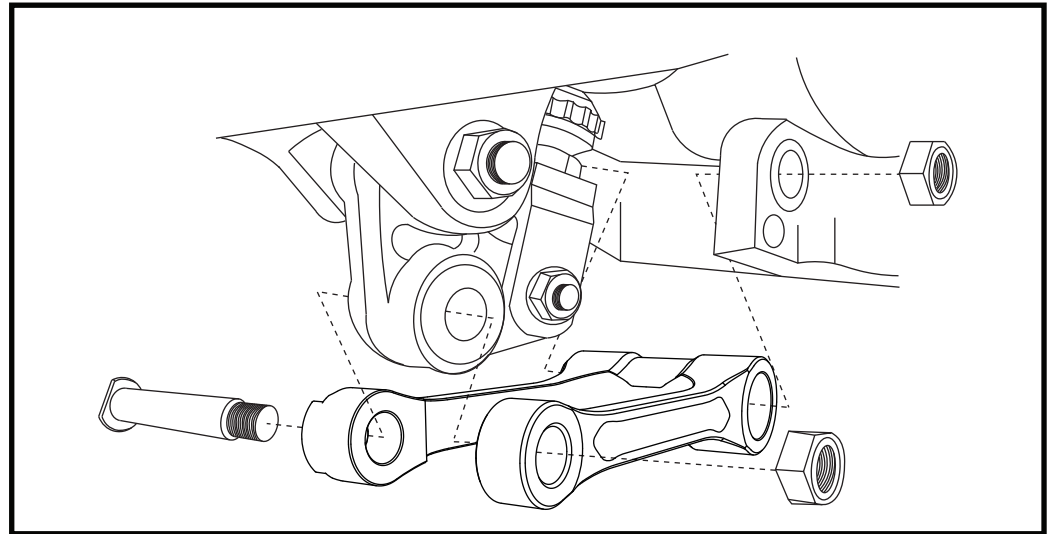

DIRT FREAK

2-30 NAKAMIZUNO SETO AICHI 489-0005 JAPAN