

取扱説明書

ZETA RACING チェーンガイド BETA RR2T/4T



この度はZETA RACING商品をお買い上げいただき、ありがとうございます。
組付けされる前に、下記の内容をよくご覧になり正しく作業を行ってください。

1.注意事項

- ・製品に対し、加工・改造を行わないでください。
事故や破損の原因になります。
- ・既に車両に装着されている純正部品以外の製品、
部品等によって本製品と干渉し使用できない場合
があります。


2.取付け方法

- 1) 純正チェーンガイドを外します。
- 2) スライダー Aの間にチェーンを入れ、スライ
ダー B、スペーサーの順に取付けます。(図1)
- 3) 純正ボルトを利用し車両にプレートAを取付け
ます。次にスライダーとプレートBを付属ボル
トを利用し取付けます。(図2)
- 4) サービスマニュアルを参照し、チェーンのたわ
み量を調整してください。

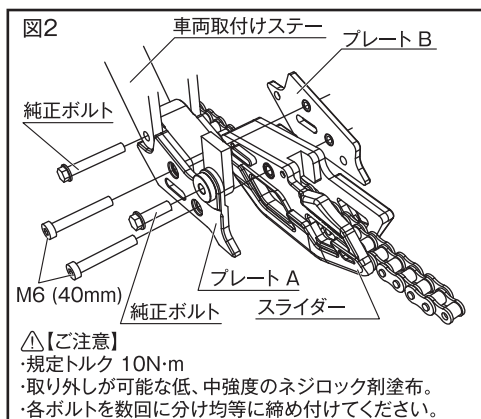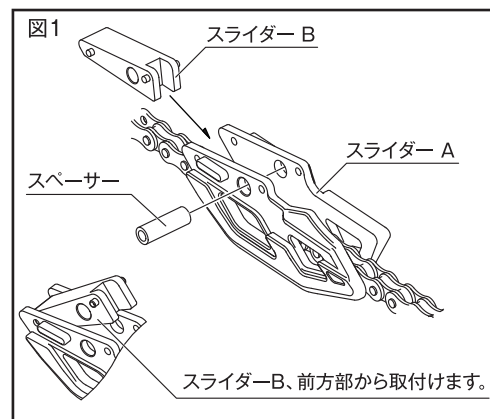

3.使用中の点検

- ・各部のボルトの緩みがないか点検。
- ・スライダーの摩耗、損傷を点検、使用限度まで摩
耗している場合交換してください。(図3)
※使用限度以上に使用した場合、スライダーの破損やチェ
ーンが外れる原因となります。
※使用状況、スプロケットの丁数により摩耗の速度が異なり
ます。
- ・スライダーのガタつきや変形が無いか点検。

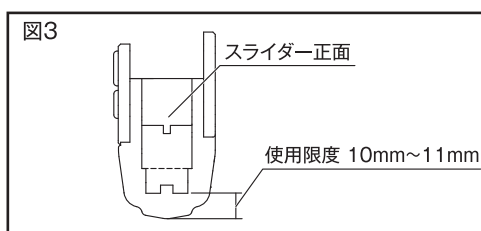

Installation Instructions

ZETA RACING CHAIN GUIDE BETA RR2T/4T



Thank you for purchasing our ZETA RACING product.
Please read this manual thoroughly before using this product to ensure proper operation.

1.Important Note

- Please do not modify this product.
- This kit can not be used with other
optional parts if they interfere with this
product.

2.Installation

- 1) Remove the stock chain guide.
- 2) Set the chain between the slider A, and
install the slider B and the spacer in this
order. (Fig.1)
- 3) Attach the plate A with the stock bolts to
the swing arm, then attach the slider and
plate B with the included bolts. (Fig. 2)
- 4) Please refer to the service manual to
adjust the chain slack.

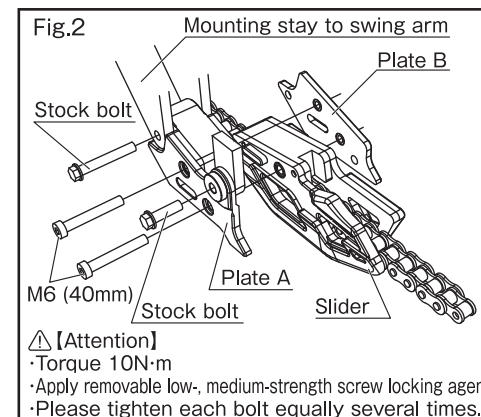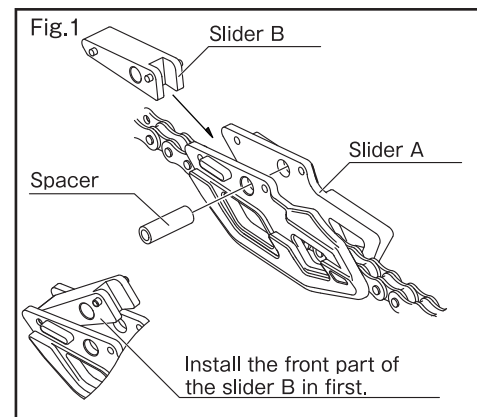

3.Inspection during use

- ・Inspect each part for loose bolts.
- ・Check the wear and damage of the slider
and replace it if it is worn past the service
limit. (Fig. 3)
* If it is used more than the usage limit, it will cause
the slider to break or cause the chain to come off.
* The speed of wear varies depending on usage and
number of teeth on the sprocket.
- ・Inspect the slider for rattling and
deformation.

