

Installation Instructions

DRC PHONE BAR MOUNT

Thank you for purchasing DRC PHONE BAR MOUNT



Please read these instructions carefully prior to installation.

1.Important notes

- Do not modify this kit.
- Please check periodically for loose bolts.
- This kit can not be used with other optional parts if they interfere with this kit.

2.Description of item

- Attaches to handle clamp within pitch 55 mm to 110mm.
- Mounting position A, B.
4 positions are available by changing the direction of this product.
- 2 height adjustment allows to fit your best position.
- * With handle bar brace installed, the position is limited.

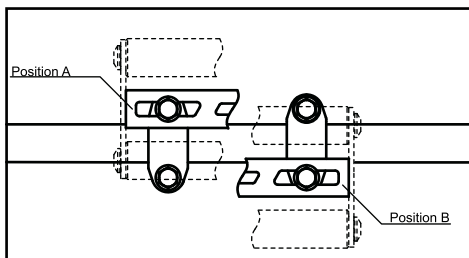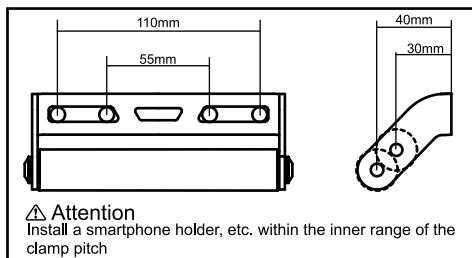

3.Installation

- Please refer to the following figure and install according to the type of handle clamp bolt and install it.
- Adjust the height, position etc. and pre-tighten. Please make sure that there is no interference with the tank, etc., after turning the steering wheel and then fully tighten.
- Please apply screw lock agent to M6 taper cap bolt.
- Although this installs to various clamps, it may be required to use aluminum spacers or purchase bolts separately to fit.
- * If you change the position, the bolt tightening trace will be left on this product.

