

# Installation instructions


## DRC FRONT CARRIER CT125 '20-, TRAIL125 '21-

Thank you for purchasing our DRC product.  
In order to use this product correctly, please read this manual carefully before use.

### 1.Important notes

- Special knowledge and skills are required for installation. Careless work may cause an unexpected accident or failure.
- Check regularly for loose bolts.
- \*Installation may become loose due to vibration or impact.
- Maximum load on this product is **2 kg**. Please do not load luggage exceeding this limit.
- This product cannot be used with other optional parts if they interfere with this product.
- Please do not modify this product.

### 2.Set Contents

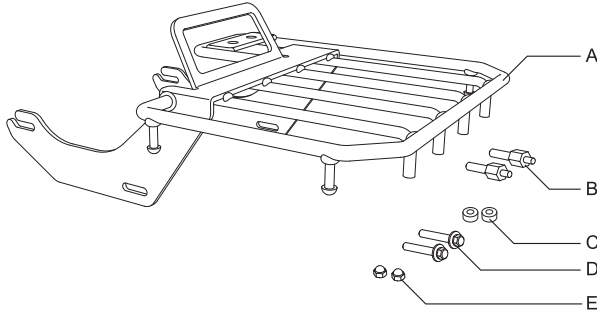


#### Set Contents

|                                             |     |
|---------------------------------------------|-----|
| A.Front carrier .....                       | 1ea |
| B.Replacement upper triple clamp bolt ..... | 2ea |
| C.Spacer .....                              | 2ea |
| D.M6x35 Flange bolt.....                    | 2ea |
| E.M6 Dome nut .....                         | 2ea |


### 3.Installation

- 1) Remove both upper triple clamp bolts and headlight mounting bolts from both left and right sides. (Fig 1)


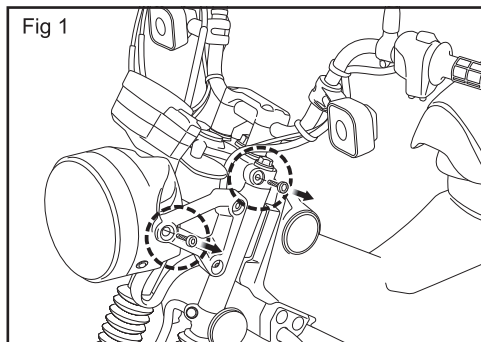


- 2) Install the replacement upper triple clamp bolts (B) to the upper triple clamp on both left and right sides. (Fig 2)


**⚠Attention**  
Specified torque 29N · m

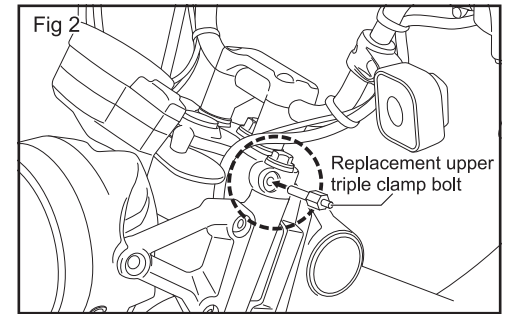

- 3) Place the spacers (C) between the headlight bracket and the front carrier to temporarily assemble with the M6x35 flange bolt (D). (Fig 3)

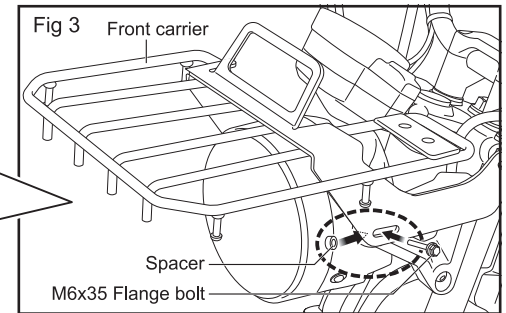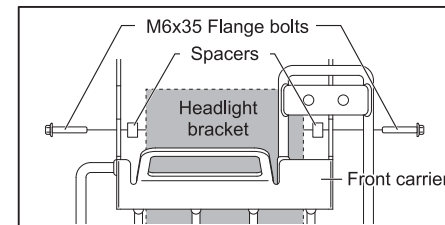

- 4) Temporarily install the M6 dome nuts (E) to the replacement upper triple clamp bolts (B) on both left and right sides. (Fig 4)

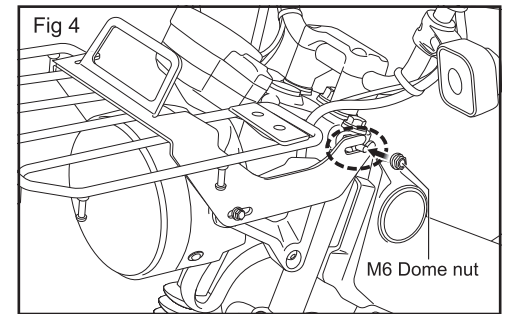

- 5) Finalize the position of the front carrier then fully tighten the M6x35 flange bolts (D) and the M6 dome nuts (E). (Fig 5)

