

Installation Instructions


DRC SIDE BAG SUPPORT KLX230/S/SM/SHERPA

Thank you for purchasing our DRC product.
Please read this manual thoroughly before using this product to ensure proper operation.

1.Important Note

- Special knowledge and skills are required for installation. Careless work may cause an unexpected accident or failure.
- This product cannot be used with other optional parts if they interfere with this product.
- Please work in a flat area.
- Always stop the engine and ensure all parts have completely cooled before performing any work. Failure to do so may result in burns or other injuries.
- If any defect is found, stop work and contact us.
- Do not process or modify this product. It may cause an accident or damage.
- Check regularly for loose bolts.
*Installation may become compromised due to vibration or impact.
- Maximum load on this product is **5kg**.
Please do not load luggage exceeding this limit.

2.Set Contents

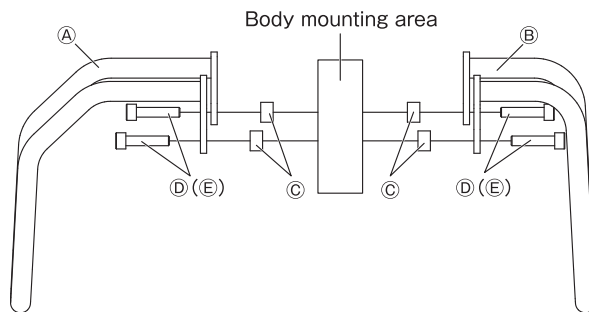


Set Contents

Ⓐ Main Body - Accelerator Side	1ea
Ⓑ Main Body - Clutch Side	1ea
Ⓒ Spacer	4ea
Ⓓ M8×35mm Cap Bolt	4ea
Ⓔ M8×40mm Cap Bolt	4ea

*Item Ⓔ bolts are used when installing the carrier simultaneously.
*If you wish to install the carrier together, please purchase the DRC Touring Carrier (Part No.: D60-10-141 / Manufacturer Part No.: G6749) separately and install it accordingly.

3.Installation Please refer to the service manual published by the manufacturer of the bike.

- 1) Refer to the service manual and remove both left and right side covers, as well as the stock bolts indicated in the illustration (Fig 1).

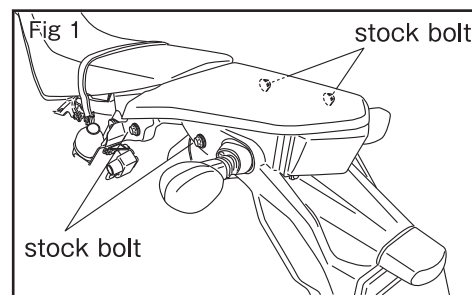


Ⓐ When installing only the side bag support

*If using together with the touring carrier, proceed to Ⓑ-2).

- Ⓐ-2) Refer to Fig 2 and install Ⓐ Main Body - Accelerator Side and Ⓑ Main Body - Clutch Side using Ⓒ Spacers and Ⓓ M8 × 35 mm cap bolts.

*Please keep the stock collars in place.

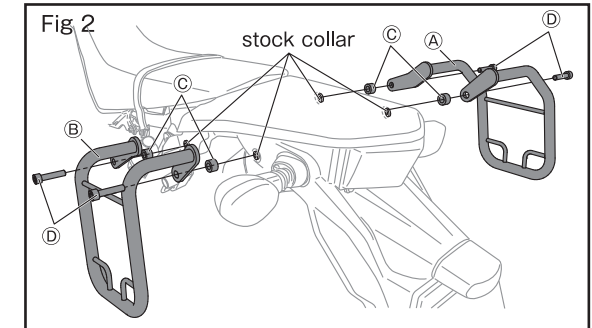


Ⓑ When using together with the TOURING CARRIER

- Ⓑ-2) Temporarily assemble the carrier body (sold separately) using Ⓒ spacers and Ⓔ M8 × 40 mm cap bolts, as shown in Fig 3.

*Please keep the stock collars in place.


*The bolt length differs between installation with only the side bag support and installation combined with the carrier.

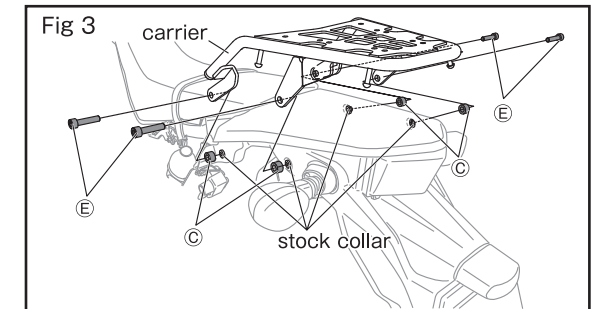

- Ⓑ-3) Remove the temporarily assembled bolts one side at a time, and temporarily assemble Ⓐ Main Body - Accelerator Side and Ⓑ Main Body - Clutch Side, as shown in Fig 4.

*Be careful, as the collars may fall off easily.

*Install the side bag support one side at a time.

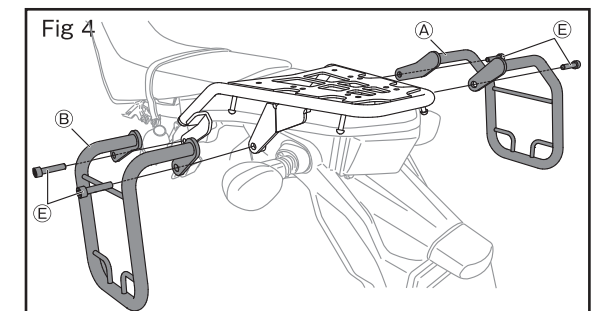

- Ⓑ-4) After completing all temporary assemblies, securely tighten all bolts.

*If you skip the temporary assembly and proceed directly to installation, some bolts may become impossible to install.