

Installation instructions

ZETA COMPLETE HANDLEBAR


Thank you for purchasing our ZETA product.

In order to use this product correctly, please read this manual carefully before use.

1.Important notes

- Special knowledge and skills are required for installation. Careless work may cause an unexpected accident or failure.
- This product cannot be used with other optional parts if they interfere with this product.
- Do not process or modify the product. It may cause an accident or damage.

2.Set Contents

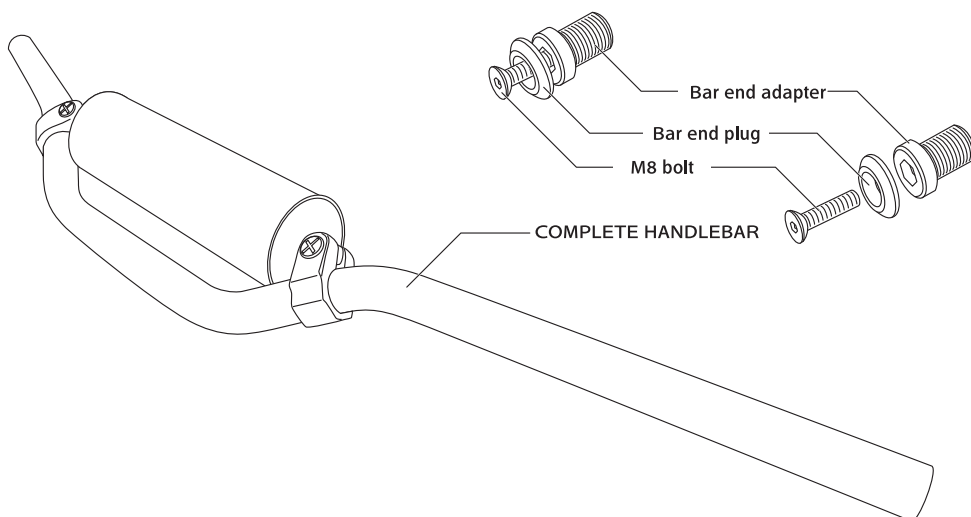

3.Installation

Please follow to the service manual published by the manufacturer of the bike.

- 1) Remove each lever, switch box, etc., referring to the service manual, and remove the stock handlebar.

*For smooth removal of the throttle, loosen the throttle housing bolts without disassembling the throttle, and remove the throttle and handlebar at the same time.

- 2) If you are installing the COMPLETE HANDLEBAR without handguard, go to ①; if you are also installing ARMOR HANDGUARD, go to ②.

① Without handguard

- 1.Install the COMPLETE HANDLEBAR on the bike and assemble it to the desired angle.

*It is recommended to insert the throttle tube/throttle housing into the handlebars first before assembling the handlebars to the bike for smooth operation.

- 2.Depend on the throttle and grip end type, work as follows.

For closed-end


Attach each lever, switch box, etc. to the handlebar.

⚠Attention

The bar end adapter is not used for the closed-end type. If bar end adapters are installed on closed-end type, they will interfere with the throttle tube and cannot be installed.


For open-end

- 1.Attach the bar end adapter to the COMPLETE HANDLEBAR (Fig 1) . Refer to the service manual and attach each lever, switch box, etc. to the handlebar.

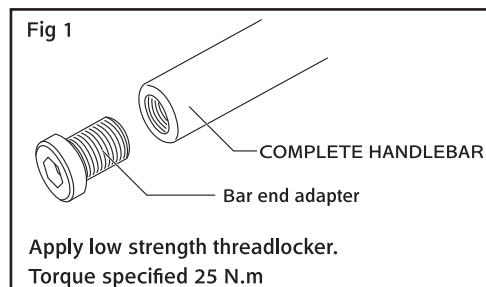

- 2.Attach the bar end plug to the bar end adapter using the supplied M8 bolt (Fig 2) .

*The length of the bar end adapter protruding from the grips varies depending on the bike. (3mm-6mm)

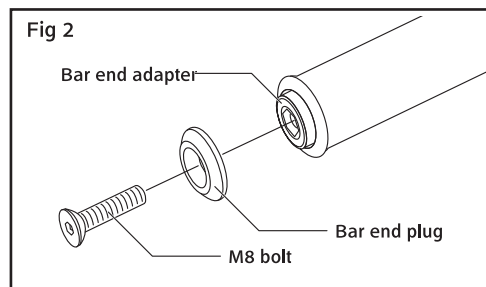


② With ARMOR HANDGUARD

1. If the throttle tube and grip ends are closed ends, replace them with open ends or cut and modify as shown in Fig 3.

- 2.Install the COMPLETE HANDLEBAR on the bike and assemble it to the desired angle.

*It is recommended to insert the throttle tube/throttle housing into the handlebars first before assembling the handlebars to the bike for smooth operation.

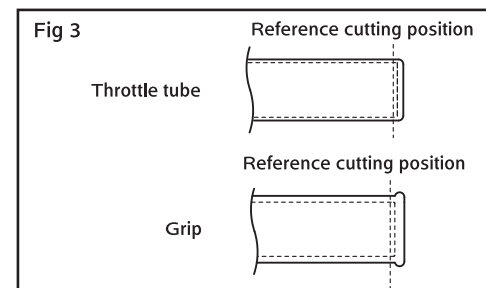

- 3.Attach the bar end adapter to the COMPLETE HANDLEBAR (see Fig 1 on the left page). Attach each lever, switch box, etc. to the handlebar.

- 4.Attach the ARMOR HANDGUARD using the supplied M8 bolt (Fig 4) . Attach it temporarily to the bar end adapter and tighten each part in a well balanced position while it is slightly movable, and then mount it.


*The anchor included with ARMOR HANDGUARD is not used.

*The bar end spacers included with the ADVENTURE ARMOR HANDGUARD series can be used together, but the M8 bolts included with this product may not be available.

*If the bar end part (M8 bolt) is tightened strongly first, it will be difficult to install the other mount parts. Please install while adjusting the ARMOR HANDGUARD mount position and bolt tightening.

*Forcefully tightening the bar end (M8 bolt) may cause damage.

*The length of the bar end adapter protruding from the grips varies depending on the bike. (3mm-6mm)

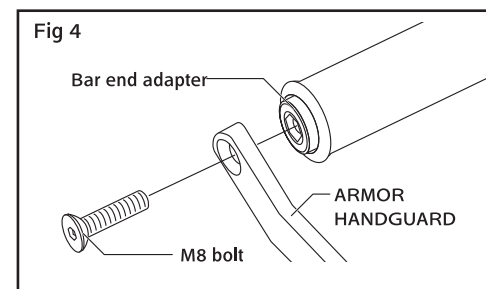

4.Notes on Use

Periodically inspect the following


- Check for loose bar end adapters.
- Throttle tube rotates smoothly.

5.Replacement

Replacement parts are available.

If any part is damaged or functionally degraded, please replace it.

Replacement bar end kit (left/right set) Part number: ZE07-5900

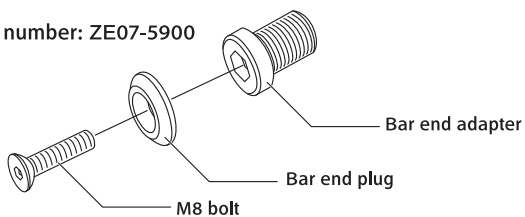

DIRTFREAK

2-30 NAKAMIZUNO SETO AICHI 489-0005 JAPAN