



Instruction

ZETA UX3 CLAMP KIT

Thank you for purchasing the ZETA UX3 CLAMP KIT.
Please read these instructions carefully prior to installation.

1. Important Notes

- Do not modify this kit.
- Installation requires special knowledge and technique. Haphazard installation may cause accidents or failure.
- This kit can not be used with other optional parts if they interfere with this kit.
- This kit adapts stock 22.2mm (7/8") bar mounts to accept 28.6mm (1-1/8") handlebars. Can not be used with 22.2mm handlebar with this kit.

2. Installation

Please refer your service manual for stock parts removing and installation.

- 1) Remove handlebar from motorcycle.
- 2) Attache Lower bar clamp (Fig 2) on OE lower bar mount (Fig 1).




Caution

Verify upper clamp fitting bolt hose is inside position.

Fig 1


Top view

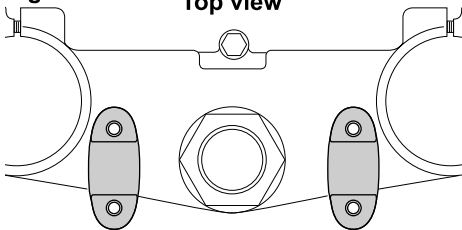

Stock handlebar mount

Fig 2


Lower handlebar clamp

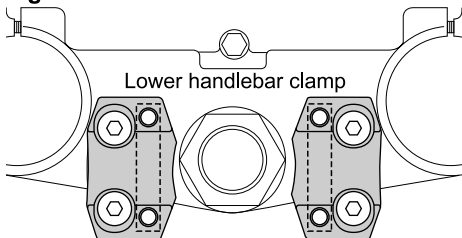

Upper handlebar clamp Installation hole



**Attaching Wrong
Lower bar clamp**

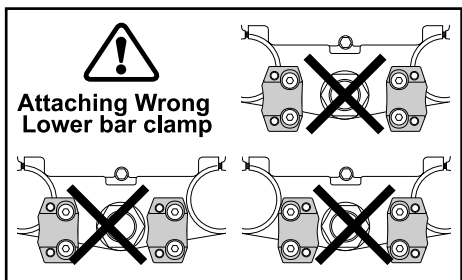


- 3) Attach Over size handlebar (28.6mm / 1-1/8") on lower bar clamp and install upper bar clamp. (Fig 3)

Caution

Set handlebar position equability on right and left side.

Fig 3

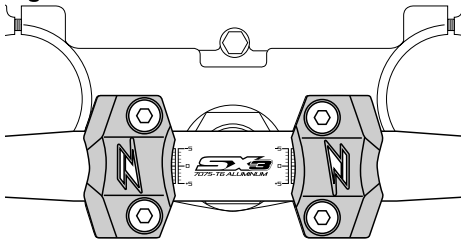

Upper handlebar clamp

- 4) Attach all stock hand control on the handlebar according to your owner's manual.
- 5) Move handlebar to check if the clutch, throttle cable, brake hose and other harnesses parts.
- 6) Tighten all bolts in regular basis.