

Installation Instruction


ZETA RX CLAMP KIT KX/KXF

Thank you for purchasing ZETA RX CLAMP KIT. Please read these instructions carefully for proper installations.

1. Important Notes

- Do not modify this kit.
- This kit cannot be used with other optional parts if they interfere with this kit.
- Installation requires special knowledge and technique. Haphazard installation may cause accidents or failure.

2. Assembly Drawing

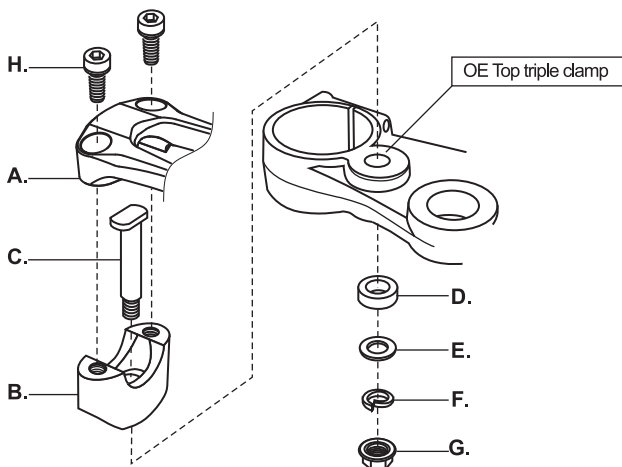

Contents of kit

- | | | |
|--------------------------------|-------------------------------|---------------------------|
| A. Upper clamp ----- 1pcs | D. Aluminum spacer ----- 2pcs | G. Flange nut ----- 2pcs |
| B. Lower clamp ----- 2pcs | E. Washer ----- 2pcs | H. M8 Cap bolt ----- 4pcs |
| C. M10 Special bolt ----- 2pcs | F. Spring washer ----- 2pcs | |

3. Installation

- 1) Pre fit parts **B.** to **G.** on your stock top triple clamp.
 - * You can choose 3 different bar clamp positions by rotating M10 special bolts.
 - * Bolt or nut on this kit may interfere with control wire guide when moving the handlebar.
- 2) Install your handlebar and attach **A.** Upper clamp and **H.** M8 Flange bolt.
 - * Tighten the bolts. Please refer your service manual for tightening torque.
- 3) Tighten **G.** Flange nut.
 - * Please refer your service manual for tightening torque.
- 4) Moving handlebar right and left, verify movement is smooth and does not interfere with any other parts. Make sure all bolts are tightened.
 - * Tighten all bolts on a regular basis.