

Installation Instruction


ZETA RX CLAMP KIT WR250R/X

Thank you for purchasing ZETA RX CLAMP KIT. Please read these instructions carefully for proper installations.

1. Important Notes

- Do not modify this kit.
- This kit cannot be used with other optional parts if they interfere with this kit.
- Installation requires special knowledge and technique. Haphazard installation may cause accidents or failure.

2. Assembly Drawing

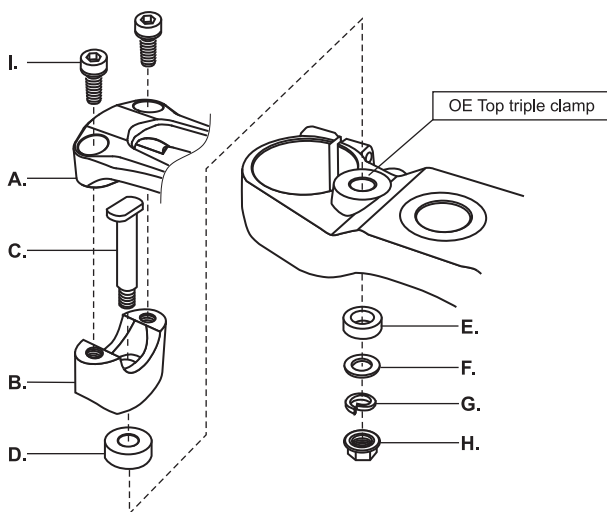

Contents of kit

A. Upper clamp ----- 1pcs	D. Aluminum spacer large -- 2pcs	G. Spring washer ----- 2pcs
B. Lower clamp ----- 2pcs	E. Aluminum spacer small -- 2pcs	H. Flange nut ----- 2pcs
C. M10Special bolt----- 2pcs	F. Washer ----- 2pcs	I. M8 Cap bolt ----- 4pcs

3. Installation

- Pre install parts **B.** to **H.** on your stock top triple clamp.
* You can choose 3 different bar clamp position by rotating M10 special bolts.
- Install your handlebar and attach **A.**Upper clamp and **I.** M8 Flange bolt.
- Tighten **H.** Flange nut.
- Moving handlebar right and left, verify movement is smooth and does not interfere with any other parts. Make sure all bolts are tightened.
* Tighten all bolts on a regular basis.