

Installation instructions

ZETA RX2 CLAMP KIT

Thank you for purchasing the ZETA product.

Please read these instructions carefully before installing.

1. Important note

- Please do not modify this product.

- This kit can not be used with other optional parts if they interfere with this product.

2. Installation

- KLX230/R


- 1) Remove the stock clamp and assemble and temporarily tighten ② ~ ⑨ (Fig. 1)

*There are three levels of lower clamp mounting positions. Use your preference position.

⚠【Attention】

④: Spacer size: $\phi 27\text{mm}$ L = 7mm

- 2) Set the handlebar and attach ① and ⑩
- 3) Tighten ⑨ temporarily assembled in 1) evenly on the left and right.
- 4) Turn the handle completely to the left and right and check if it moves smoothly.
Check if you have forgotten to tighten each bolt.
*Check regularly for loose bolts.

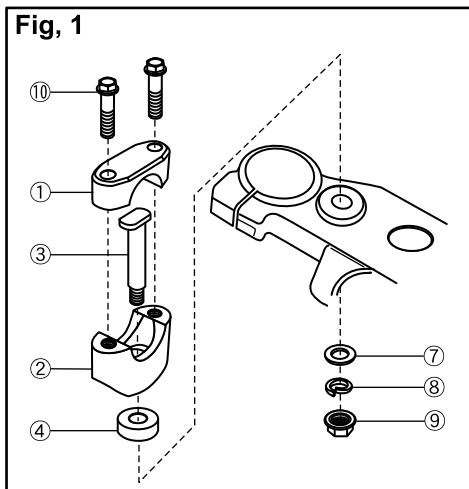

- WR250R/X

- 1) Remove the stock clamp and assemble and temporarily tighten ② ~ ⑨ (Fig. 2)


*There are three levels of lower clamp mounting positions. Use your preference position.

⚠【Attention】

⑤: Spacer size: $\phi 28.5\text{mm}$ L = 11mm

⑥: Spacer size: $\phi 21\text{mm}$ L = 7mm

- 2) Set the handlebar and attach ① and ⑩
- 3) Tighten ⑨ temporarily assembled in 1) evenly on the left and right.
- 4) Turn the handle completely to the left and right and check if it moves smoothly.
Check if you have forgotten to tighten each bolt.
*Check regularly for loose bolts.

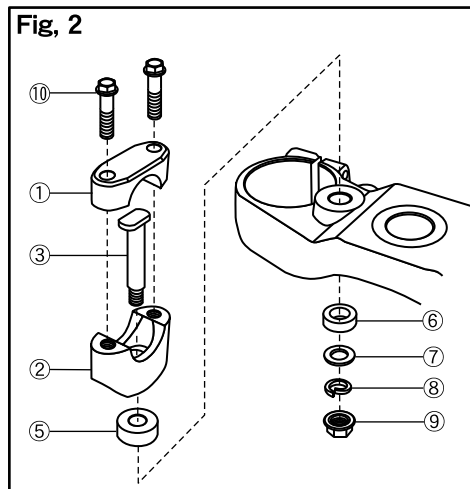

•Kit content

① Upper clamp ———— 2	④ Spacer($\phi 27 \times 7$) ———— 2	⑦ Washer ———— 2	⑩ M8 Flange bolt ———— 4
② Lower clamp ———— 2	⑤ Spacer($\phi 28.5 \times 11$) ———— 2	⑧ Spring washer ———— 2	
③ M10 SP bolt ———— 2	⑥ Spacer($\phi 21 \times 7$) ———— 2	⑨ Flange nut ———— 2	