

# Installation Instructions

## ZETA RADIATOR GUARD CRF450L '18-

Thank you for purchasing ZETA products.


Please read these instructions carefully prior to installation.

### 1. Important notes

- Installation requires special knowledge and technique. Haphazard installation may cause accidents.
- This kit can not be used with other optional parts if they interfere with this kit.
- Inspect each bolt and nut regularly, and retighten as necessary.


### 2. Name of each part and set contents

#### Left side component Stock radiator grill Left

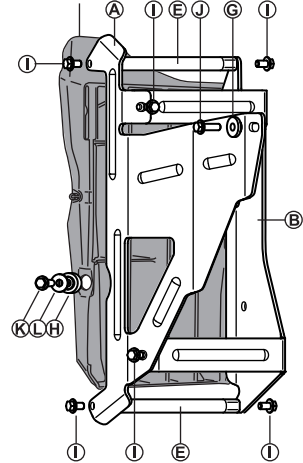

#### Right side component

##### Stock radiator grill Right

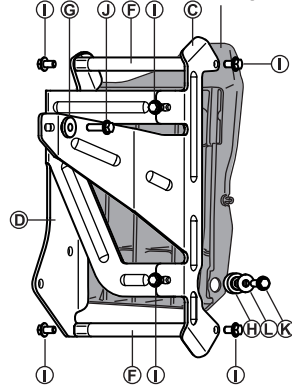

#### Set content

- A. Radiator guard L1 —1pc
- B. Radiator guard L2 —1pc
- C. Radiator guard R1 —1pc
- D. Radiator guard R2 —1pc
- E. Shaft 1 (148mm) —2pcs
- F. Shaft 2 (142mm) —2pcs
- G. Spacer 1 —2pcs
- H. Spacer 2 —2pcs
- I. M6×10 Flange bolt —12pcs
- J. M6×20 Flange bolt —2pcs
- K. M6×25 Flange bolt —2pcs
- L. Washer —2pcs



### 3. Installation

#### - Removal of stock cover


- 1) Remove the seat → shroud left / right → radiator left / right.
  - 2) Remove the front fender.
- \* Refer to the service manual for removing each part.

#### - Guard installation


- 1) Remove the rubber attached to the radiator.
- 2) Remove the clutch cable clip.
- 3) Pass the clutch cable through the inside of the radiator, and insert B into the rear of the radiator from the frame side.
- 4) Fix the radiator with B after installing E on the top.

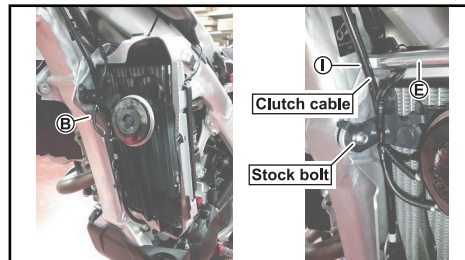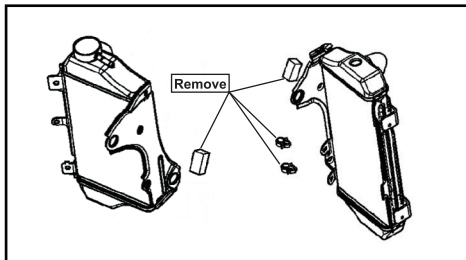


- 5) Attach the clutch cable clip only on the upper side.  
(Note the direction)
- 6) Attach E to the bottom.

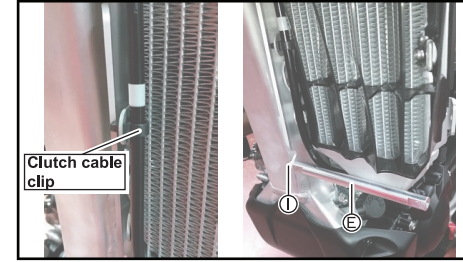


- 8) Attach the shroud using the included bolts and spacers.

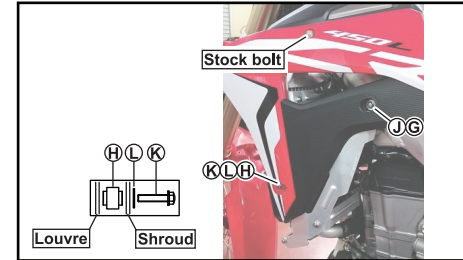


- 11) Attach E to the bottom.

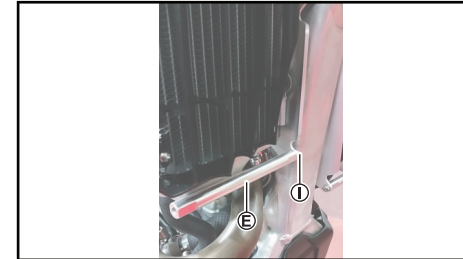


- 7) Install A.

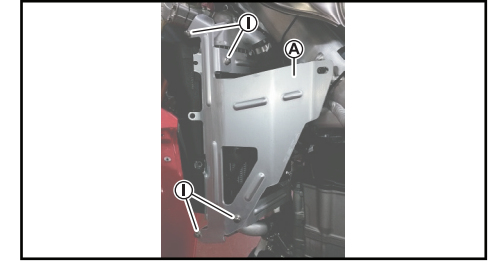


- 9) Insert D from the side of the frame into the back of the radiator.
- 10) Attach the radiator with D after installing E at the top.

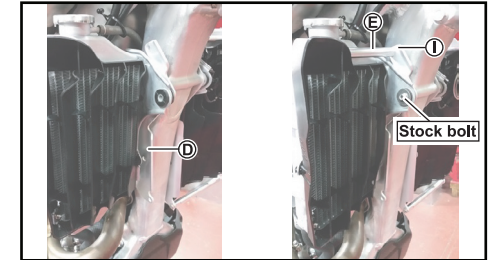

- 12) Install C.

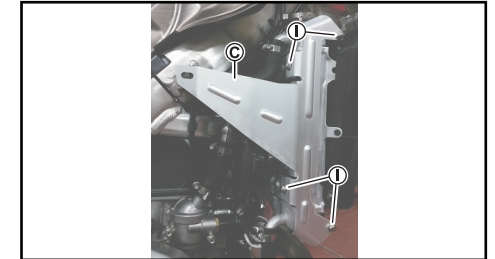

- 13) Attach the shroud using the included bolts and spacers.

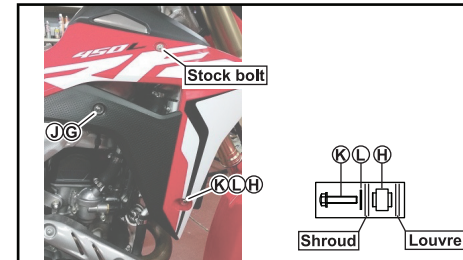

- 14) Attach the seat and the front fender.